

Before using the product for the first time, read through the operator's manual carefully and observe all safety instructions!

General safety instructions & intended use

The PistenBully Mini-Skis are a toy for children starting to ski. The intention is for children to have fun gliding, hopping and running in the snow as they gain their first experiences skiing.

The PistenBully Mini-Skis are intended for use without ski poles. The PistenBully Mini-Skis can be stopped by doing a snowplow turn.

Warning: use the PistenBully Mini-Skis:

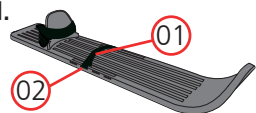
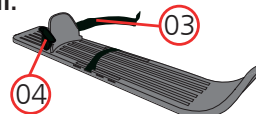
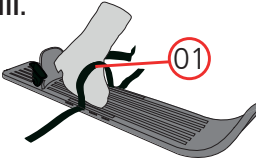
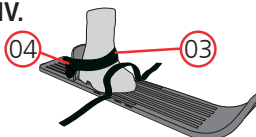
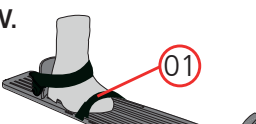
- under supervision,
- on flat and gently downward-sloping terrain,
- for ages 6 to 10 years old,
- for children up to a maximum body weight of 50 kg,
- with winter footwear from European size 30 to 40,
- on a previously groomed surface,
- for sliding/running/moving on flat terrain,
- for herringbone stepping on flat and gently upward-sloping terrain.

Warning: do not use the PistenBully Mini-Skis:

- in deep snow,
- on alpine ski slopes,
- for snow hiking on the terrain,
- for cornering due to missing edges,
- unsupervised,
- without suitable protective equipment (gloves, helmet...).



Using PistenBully Mini-Skis

- I. 
 1. For both Mini-Skis, thread the front, narrow hook and loop fastener **01** through one of the four slots **02** to match your child's shoe size [Figure I].
 2. Place both Mini-Skis on a level surface.
- II. 
 3. For both Mini-Skis, open the wide, rear hook and loop fastener **03** and thread it through the eye **04** [Figure II].
- III. 
 4. On both sides, open the narrow, front hook and loop fastener **01** [Figure III].
 5. Pull the front Velcro strip **01** upwards in the middle so that a loop is formed [Figure III].
 6. Have the child slip one foot with suitable winter footwear through the loop at the front hook and loop fastener **01** [Figure III].
- IV. 
 7. Make sure that the heel is touching the back edge of the brace.
 8. Thread the rear Velcro strip **03** through the eye **04** [Figure IV].
 9. Pull the rear Velcro strip **03** tight and close it [Figure IV].
- V. 
 10. Pull the front Velcro strip tight on both sides. Lift the tightened Velcro strip ends **01** over the top and close them [Figure V].
 11. Check to make sure the Velcro strips are secure and both hook and loop fasteners are tightly closed.
> **Now the Mini-Skis can be used.**

Caring for and disposing of PistenBully Mini-Skis

- Each time the Mini-Skis are used, clean off the snow and moisture afterwards. Store the Mini-Skis in a dry location.
- PistenBully Mini-Skis are designed to be used for a maximum time of five years (see material clock on the Mini-Ski).
- To dispose of them correctly, please observe the country-specific regulations.

Contact

If you have any questions or would like clarification, please contact:

ceka! fullservice GmbH
 Eschachweg 19
 89264 Weissenhorn
 Germany

Phone: +49 7309-9621-0
 Email: ceka-team@PistenBully.com